

ASSEMBLY INSTRUCTIONS

TEBURU MINIMALIST WORK DESK

11.04054.00




YOUR PACKAGE CONTAINS

16 Bronze
Screws

4 long screws

6 Medium
Screws

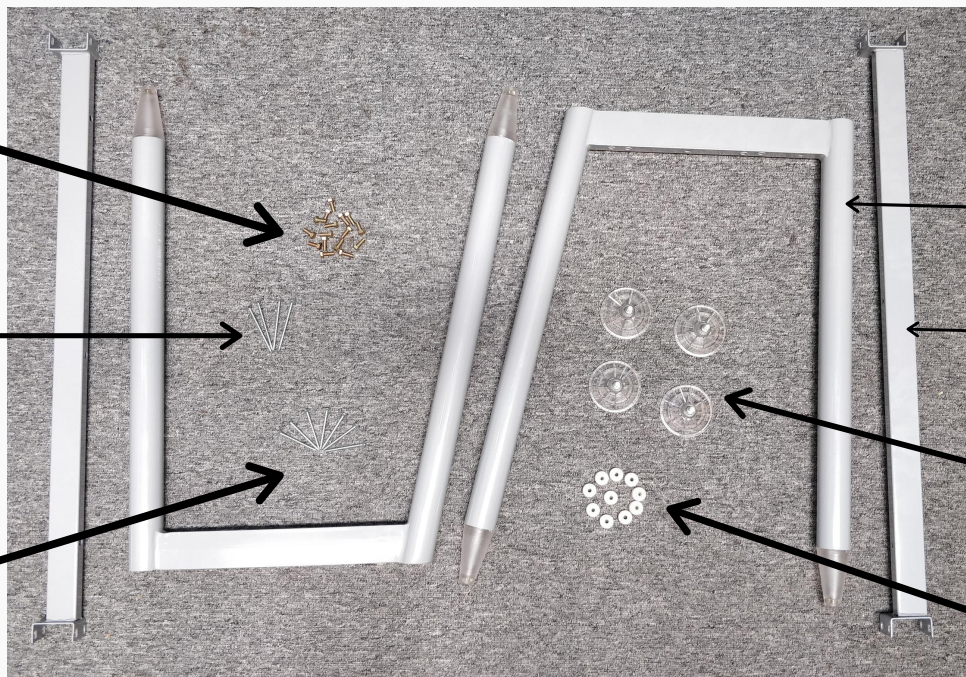

1 Table Top


2 Legs

2 Beams

4 Leg Bushes

10 White bush

ASSEMBLY INSTRUCTIONS

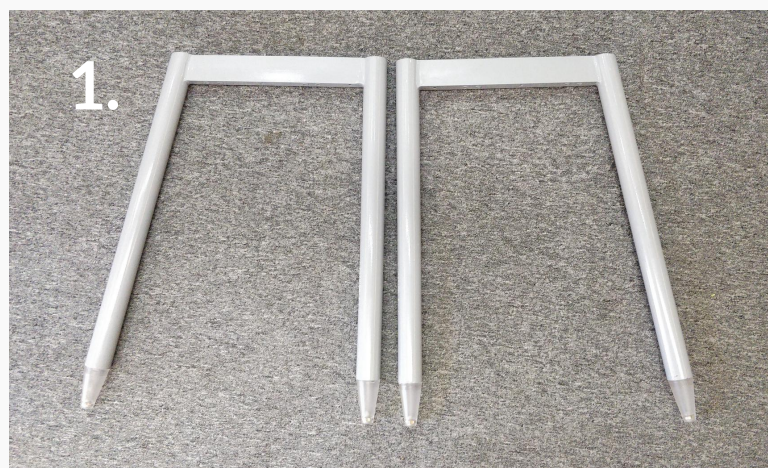

1.


Place the two legs as
shown in the picture.



2.

Screw on the Leg
Bushes to the bottom
of each leg of the table
in a rotating motion.


ASSEMBLY INSTRUCTIONS

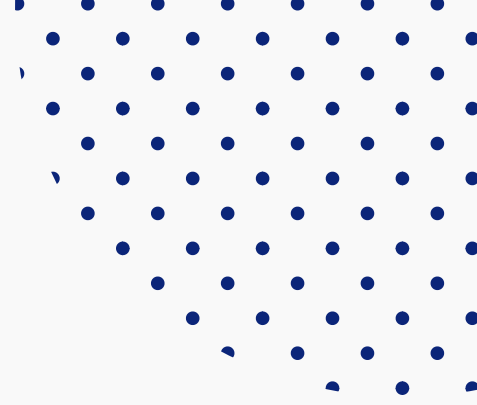

3.

Use the bronze screws to secure the beam to the legs with the top of the beam laying flat on the top of the legs.


4.
Do this with 8 bronze screws on all 4 sides.

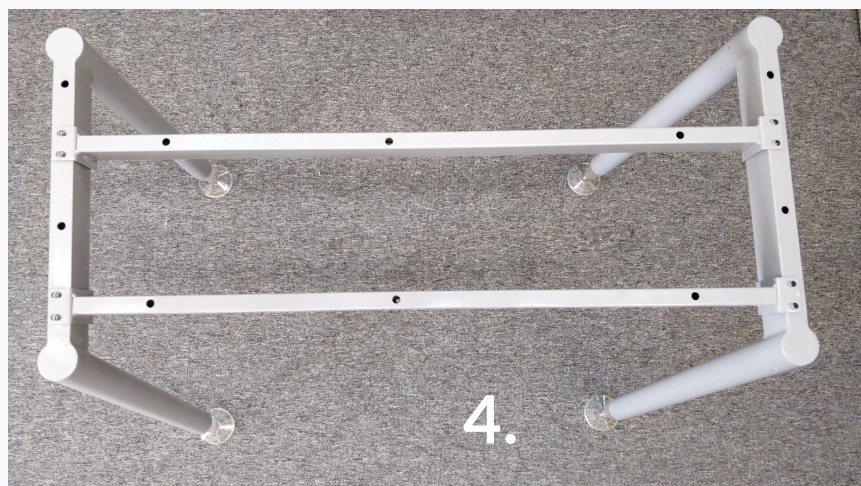

5.

Secure the beams with the bronze screws from underneath as well.

ASSEMBLY INSTRUCTIONS

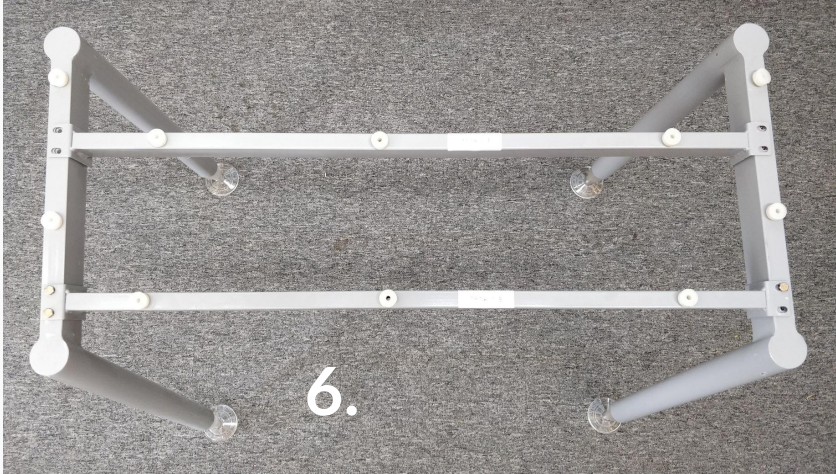

6.

Insert the white bushes into the 3 holes on each beam and 2 holes on each leg as shown with the narrow tip of the bushes going into the hole..

7.

Align the table top

8.

From underneath the table, screw in the medium screws along the beam and the long screws at the legs. The screws must go through the bushes and into the table.



Your Teburu Minimalist Work Desk is now ready.

For best results, use the tightening mode of the drilling machine for tightening all the screws on this desk.

While a hand-held screw driver might work for setup, it is always suggested that you use the machine for maximum stability.